



GP50

DISCONTINUED


10-32F
Thread

**5/16" WEDGE GRIP
200 lbf/100 kgf/1000 N CAPACITY**

Spring loaded grip, self-tightening jaw automatically closes on specimen. Finger tab opens serrated wedges for quick insertion and release. 5/16" [8 mm] jaw width, 1/8" [3 mm] maximum opening. Throat depth: 1" [25 mm].

Overall length: 2 3/8" [60 mm]. Weight: 3 oz [85 g].

MODEL	DESCRIPTION	PRICE
GP50	Single Grip	\$360.00

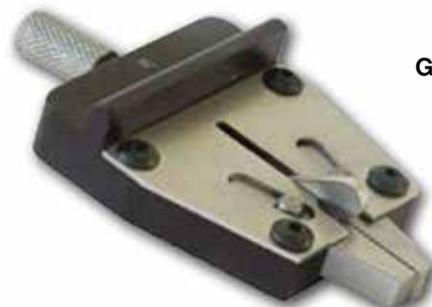

GP60

10-32F
Thread

**1/4" LIGHT WEDGE GRIP
100 lbf/50 kgf/500 N CAPACITY**

Spring loaded grip, self-tightening jaw automatic-ally closes on specimen. Finger tab opens serrated wedges for quick insertion and release. 3/16" [5 mm] jaw width, 1/8" [3 mm] maximum opening. Throat depth: 5/8" [16 mm].

Overall length: 2 1/2" [62 mm]. Weight: 1 oz [28 g].

MODEL	DESCRIPTION	PRICE
GP60	Single Grip	\$225.00



GP1012

DISCONTINUED


10-32F
Thread

**1/2" WEDGE GRIP
200 lbf/100 kgf/1000 N CAPACITY**

Spring loaded grip, self-tightening jaw automatically closes on specimen. Lever operated serrated wedges for quick insertion and release. 1/2" [13 mm] jaw width, 5/32" [4 mm] maximum opening.

Overall length: 2" [51 mm]. Weight: 5 oz. [140 g].

MODEL	DESCRIPTION	PRICE
GP1012	Single Grip	

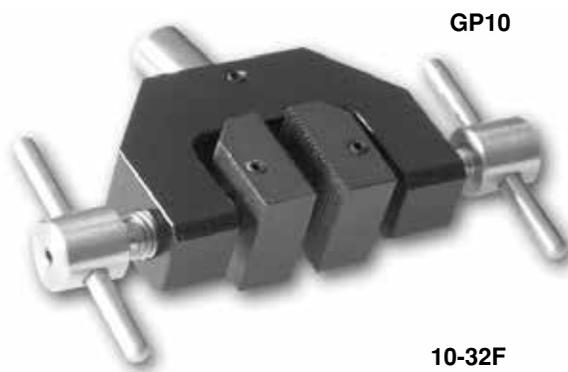

GP10

10-32F
Thread

**3/4" FLAT CHUCK GRIP
100 lbf/50 kgf/500 N CAPACITY**

Wing screws adjusts grip. 3/4" [19 mm] wide grip faces tighten separately on sample. 3/8" [9 mm] maximum opening. 3/4" [19 mm] throat depth.

Overall length: 2" [51 mm]. Weight: 6 oz [170 g].

MODEL	DESCRIPTION	PRICE
GP10	Single Grip	\$290.00

Prices and specifications are subject to change without notice.

CALL US TOLL FREE 800-345-4188





GP90-1

10-32F
Thread

1" RIBBON GRIP
100 lbf/50 kgf/500 N CAPACITY

Wide grips with a smooth face and serrated face for grasping film or ribbon specimens. Thumb screw tightens grip on sample. 5/16" [8 mm] maximum opening. Throat depth: 1/2" [13 mm].

Overall length: 2 1/2" [65 mm]. Weight: 4 oz [113 g].

MODEL	DESCRIPTION	PRICE
GP90-1	Single 1" Grip	\$180.00



GP1015-1

10-32F
Threads



GP1015-2



GP1015-3

RIBBON GRIPS
100 lbf/50 kgf/500 N CAPACITY

Extra wide grips, 3", 5" and 7" [76, 127 & 178 mm], with lightly serrated faces for grasping thin film, paper, plastic specimens. Thumbscrew tightens to firmly grip specimens to 1/2" [13 mm] thick.

Overall length and weight: see chart below.

MODEL	DESCRIPTION	PRICE
GP1015-1	3" [76 mm] Width Single Grip/10 oz [272 g]	\$310.00
GP1015-2	5" [127 mm] Width Single Grip/11 oz [318 g]	330.00
GP1015-3	7" [178 mm] Width Single Grip/13 oz [364 g]	350.00



GP140

10-32F
Threads

FILAMENT FIXTURE
50 lbf/25 kgf/2500 N CAPACITY

Precision aluminum fixture for testing filament or fine wire up to 1/32" [1 mm] diameter without damaging specimen. Fixture swivels as load is applied for proper alignment. Thumb screw tightens clamp to hold loose end.

Overall length: 2" [51 mm]. Weight: .1 oz [28 g].

MODEL	DESCRIPTION	PRICE
GP140	Single Grip	\$155.00



GP70

10-32F
Thread

1/16" FINE POINT GRIP
30 lbf/15 kgf/150 N CAPACITY

Slender narrow point grip for testing fine wire, ribbon, etc. Excellent for tight access, such as crowded circuit boards. Thumbscrew tightens grip. 1/16" [1.6 mm] jaw width; 1/16" [1.6 mm] maximum opening between jaw faces. Throat depth: 3/8" [9 mm].

Overall length: 1 7/8" [48 mm]. Weight: 1 oz [28 g].

MODEL	DESCRIPTION	PRICE
GP70	Single Grip	\$155.00

Prices and specifications are subject to change without notice.

CALL US TOLL FREE 800-345-4188



www.wagnerinstruments.com



GP1001

**5/16-18
Thread**

**WIRE TERMINAL TEST GRIP
250 lbf/125 kgf/1250 N CAPACITY**

Tests breaking strength of wire terminal connections. Thumbscrew adjusts width of slotted gap to accommodate wire diameters to 3/8" [9 mm].

Overall length: 3 3/8" [86 mm]. Weight: 5 oz [142 g].

MODEL	DESCRIPTION	PRICE
GP1001-0	Wire sizes 0 - 1/8" [0 - 3 mm]	\$230.00
GP1001-1	Wire sizes 1/8" - 1/4" [3 - 6 mm]	230.00
GP1001-2	Wire sizes 1/4" - 3/8" [6 - 9 mm]	230.00



GP20

**10-32F
Thread**

**SMALL PIN VISE
25 lbf/18 kgf/120 N CAPACITY**

Small chuck grip for testing pin shaped specimen from 0" to 0.05" O.D.

Overall length: 1 3/4" [45 mm]. Weight: .2 oz [6 g].

MODEL	DESCRIPTION	PRICE
GP20	Small Pin Vise	\$65.00



GP1002

**10-32F
Threads**

**DUAL CAM GRIP
200 lbf/100 kgf/1000 N CAPACITY**

Spring actuated and a fixed serrated cam with open end for easy insertion of wire or other specimens to 1/4" [6 mm] thick and 1/2" [13 mm] wide. Lever activated cam for quick insertion and release. Distance to cam engagement point: 3/8" [9 mm].

Overall length: 2" [51 mm]. Weight: 3 oz [85 g].

MODEL	DESCRIPTION	PRICE
GP1002	Single Grip	\$180.00



GP30

**10-32F
Thread**

**1/4" PIN VISE
100 lbf/50 kgf/500 N CAPACITY**

Large chuck grip for testing pin shaped specimen from 0.03" to 0.25" O.D.

Overall length: 2 5/8" [65 mm]. Weight: 4 oz [113 g].

MODEL	DESCRIPTION	PRICE
GP30	Single Grip	\$75.00

Prices and specifications are subject to change without notice.

www.wagnerinstruments.com

CALL US TOLL FREE 800-345-4188

